

RS232C - microUSB - 2HSS57



5	GND
4	—
3	RX232
2	TX232
1	+5V

+5V do not connect to the RS232C cable

+5V supply from 2HSS57 only needed for HISU